



9

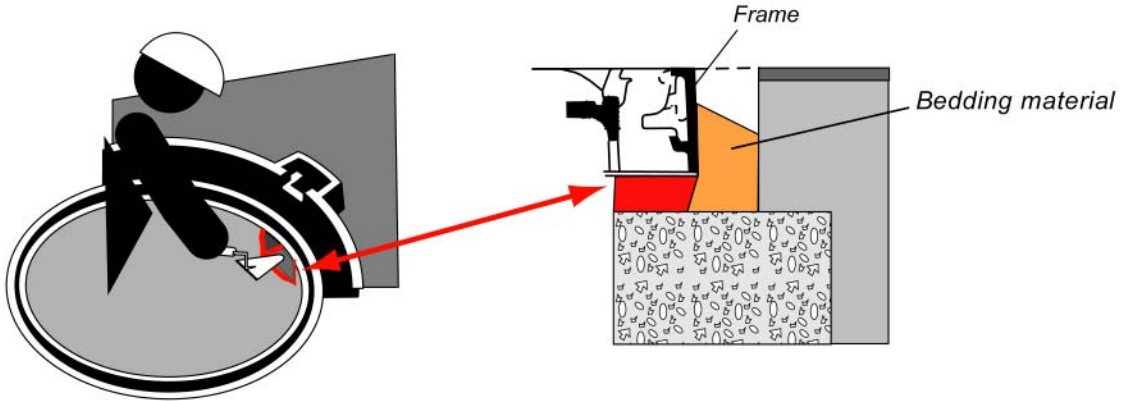

10

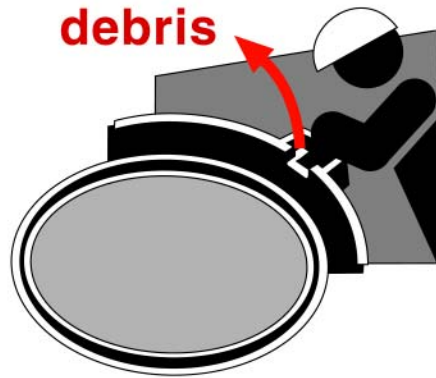

GENERAL RECOMMENDATIONS

The following recommendations specific to Saint-Gobain products are not meant to replace local safety or installation practices. SG Canalisation are not responsible for any malfunctioning or failure of their products when the guidelines below are not followed.

- Specify appropriate bedding mortar, depending on site conditions and allocated time for installation before any re-opening of traffic.
- Check that frame complies sufficiently in dimension with the concrete / masonry structure, for efficient bearing.
- Control the healthy head of chamber as efficient bearing surface for any municipal casting.
- Make sure that slotted frames are minutiously filled in with mortar for efficient interaction with iron and structure.
- To check that bedding mortar is not in contact with either hinge housing or cushioning insert, make sure:
 - when using resin mortar, the concrete surface is totally dry before mortar spreading
 - elastomer plugs installed inside Pamrex hinge boxes of frames are properly placed
 - hinge, locking devices, gaskets and contact surfaces are cleaned before allowing traffic and operation
 - the anti-theft Rexus spline is activated and prevents the cover from being removed
 - frame and cover are fully flush to road level after installation.

For any advice or assistance, please contact :

1. The selling merchant
2. SAINT-GOBAIN PIPELINES PLC (UK): Lows Lane Stanton-by-Dale Ilkeston Derbyshire DE7 4QU

Technical advice : Tel : 011 44 1664 814 053 Fax : 011 1664 812 060