



REQUIREMENTS FOR INSTALLATION OF PAMREX MANHOLE COVER

① During the Installation

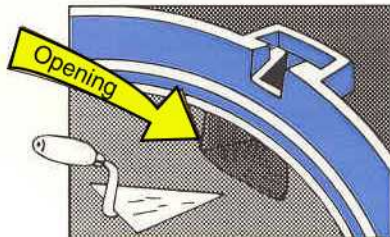

Do not forget to make a opening in the fresh bedding material under the hinge box housing of the frame

② After the Installation

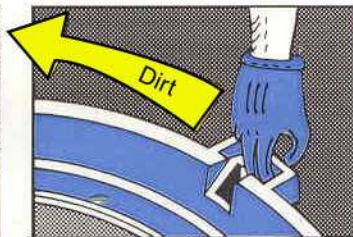

Do not forget to clean the hinge box housing of the frame. Remove the remainders of bedding material.